

# Use of Block on Intercat 1500 Mainsail reef points

- Remove stainless steel spacer at end of block and insert in the ring on the leech of the sail

